SIB 33 04 08 2009-08-01

Clicking or Cracking Noise from Rear Differential

This Service Information bulletin supersedes SI B33 04 09 dated October 2008.

MODEL

E82 and E88 (1 Series), all models	I EXS and EXS (7/1) all models	`	E63 and E64 (6 Series), all models
`	E90, E91, E92 and E93 (3 Series), all models		


SITUATION

The customer complains that a single cracking or clicking noise can be heard from the rear of the vehicle while engaging a drive gear, releasing the clutch, during load reversal (shifting from reverse to drive, etc.), or when accelerating from a stationary position.

PROCEDURE

This is not a failure of the differential assembly. Do not replace the complete differential.

Remove the differential drive flange in accordance with Repair Instruction RA 33 11 021.

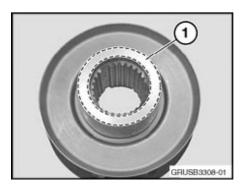

Apply lubricant P/N 83 23 0 443 864 on the input flange mating surface (1), as described in the illustration.

Before complete reassembly, replace the input flange seal and collar nut retaining plate as described in RA 33 01 021. Refer to the EPC for correct part numbers, based on model.

PARTS INFORMATION

Part Number	Description	Quantity
UPDATE: 83 23 0 443 864	Lubricant	**
Refer to EPC	Drive Flange Seal	1
Refer to EPC	Collar Nut Retaining Plate	1
UPDATED with O NA/ Index in for 1		

** See Warranty sublet information.

WARRANTY INFORMATION

Covered under the terms of the BMW New Vehicle Limited Warranty.

Defect Code: 33 10 01 39 00

Labor Operation: Labor Allowance: Description:

Copyright ©2022 BMW of North America, Inc.

Replacing Input Shaft Flange Seal

Sublet ** Reimbursement of up to the amount listed may be charged to sublet code 4 for the Code \$9.00 lubricant (P/N 83 23 0 443 864) required to perform this repair. Claiming this part number outside of sublet code 4 will result in a delayed or denied claim payment.

*Main Work - use this labor operation number when this is the only repair being performed, or if this is the main repair when performed along with other repairs at the same time. If this is not the main repair, refer to KSD for the associated (+) labor operation code.